


Business Hotspot installation instructions

Modem to controller

Place the controller near the satellite modem in a secure location.

Connect the blue Ethernet patch cable from the modem to Port 1 on the controller.

Then plug in the power cable from the controller to the power source.

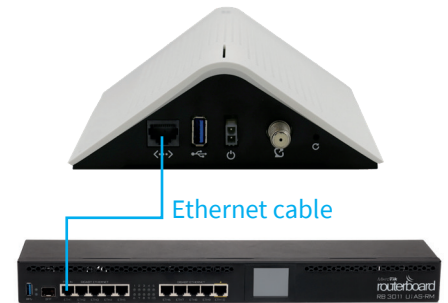

Controller to PoE injector

Connect one end of a yellow Ethernet patch cable into one of Ports 2-5 on the controller.

Then connect the other end of the patch cable into the LAN port on the PoE injector. Repeat this step for each additional PoE injector.



PoE injector to indoor AP

Connect one end of the standard CAT5 Ethernet cable into the POE port on the PoE injector.

Then connect the other end of the Ethernet cable into the POE IN Ethernet port on the back of the AP.

Plug the PoE injector into the power source.

Repeat this step for each additional PoE injector.



After boot-up, verify that the PWR LED on the AP is a steady green.

PoE injector to outdoor AP

Connect one end of the outdoor-rated Ethernet cable into the POE port on the PoE injector.

Then connect the other end of the Ethernet cable through the cable gland assembly to the Ethernet port on the front of the AP.

Plug the PoE injector into the power source.

Repeat this step for each additional PoE injector.



After boot-up, verify that the PWR LED on the AP is a steady green.